

# Handles.MobileWingAExecutors.ChangePage

## ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

Void Handles.MobileWingAExecutors.ChangePage(int32 index)

<b>API</b>	no
<b>description</b>	toggles the Executors on the first connected Titan Mobile Faderwing to a specific page
<b>Namespaces</b>	<a href="#">handles.mobilewingaexecutors</a>
<b>parameter</b>	Int32 index - the index of the page to change to
<b>return value</b>	(Void)

### Example in

[Pages - Change All Playback Pages:](#)

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">
  <description>Changes the Mobile Wing playbacks page to page
1.</description>
  <sequence>
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>
  </sequence>
</macro>
```

### Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

### Remarks

From: <https://avosupport.de/wiki/> - AVOSUPPORT

Permanent link: <https://avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage?rev=1509294949>

Last update: 2017/10/29 16:35

