

# Handles.MobileWingAExecutors.ChangePage

## ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

```
Void Handles.MobileWingAExecutors.ChangePage(int32 index)
```

|                     |  |
|---------------------|--|
| <b>API</b>          | no   |
| <b>description</b>  | toggles the Executors on the first connected Titan Mobile Faderwing to a specific page |
| <b>Namespaces</b>   | <a href="#">handles.mobilewingaexecutors</a>   |
| <b>parameter</b>    | <a href="#">Int32</a> index - the index of the page to change to                       |
| <b>return value</b> | <a href="#">(Void)</a>   |

## Example in

[Pages - Change All Playback Pages:](#)

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">
  <description>Changes the Mobile Wing playbacks page to page
1.</description>
  <sequence>
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>
  </sequence>
</macro>
```

## Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

## Remarks

From:

<https://avosupport.de/wiki/> - AVOSUPPORT

Permanent link:

<https://avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage?rev=1509294949>

Last update: 2017/10/29 16:35

