

Handles.MobileWingAExecutors.ChangePage

ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

```
Void Handles.MobileWingAExecutors.ChangePage(int32 index)
```

API	no
description	toggles the Executors on the first connected Titan Mobile Faderwing to a specific page
Namespaces	handles.mobilewingaexecutors
parameter	Int32 index - the index of the page to change to
return value	(Void)

Example in

[Pages - Change All Playback Pages](#):

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">  
  <description>Changes the Mobile Wing playbacks page to page  
1.</description>  
  <sequence>  
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>  
  </sequence>  
</macro>
```

Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

Remarks

From:
<https://avosupport.de/wiki/> - AVOSUPPORT

Permanent link:
<https://avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage?rev=1509294949>

Last update: 2017/10/29 16:35

