

Function

Masters.TapTempo

```
Void Masters.TapTempo(Handle handle, DateTime panelTimeStamp)
```

| | |
|---------------------|--|
| API | http://api.avolites.com/10.1/Masters.TapTempo.html |
| description | Sets the speed of the master from the tap speed of a key. |
| namespace | Masters |
| parameter | handle (Handle) : the master handle to apply the tap on panelTimeStamp (Timestamp) : The panel time stamp. The software then calculates the beat based on the timestamps of the various taps. |
| return value | Void |

Example in

[Masters - BPM Master \(snippet\)](#):

```
<step>Masters.TapTempo(1607, Math.GetCurrentTimeStamp())</step>
```

Also used in

- [Masters - BPM Master \(snippet\)](#)
- [Masters - BPM - Tap](#)
- [Masters - BPM Master - Set Speed](#)
- [Function list](#)
- [Math.GetCurrentTimeStamp](#)
- [Handle](#)

Remarks

From:

<https://avosupport.de/wiki/> - **AVOSUPPORT**

Permanent link:

<https://avosupport.de/wiki/macros/function/masters.taptempo>

Last update: **2018/06/19 15:41**

