

Function

# Triggers.ToggleMappingEnable

```
Void Triggers.ToggleMappingEnable(Int32 mappingId)
```

<b>API</b>	<a href="http://api.avolites.com/10.1/Triggers.ToggleMappingEnable.html">http://api.avolites.com/10.1/Triggers.ToggleMappingEnable.html</a>
<b>description</b>	Toggles whether a mapping is enabled.
<b>namespace</b>	Triggers
<b>parameter</b>	mappingId ( <a href="#">Int32</a> ) : The ID of the trigger mapping to toggle As the first two mappings are predefined and cannot be altered, the first user mapping is ID=2.
<b>return value</b>	<a href="#">Void</a>

## Example in

[Trigger - Toggle Trigger Mappings v10/v11](#):

```
<step>Triggers.ToggleMappingEnable(2)</step>
```

## Also used in

- [Trigger - Toggle Trigger Mappings v10/v11](#)
- [Function list](#)
- [Triggers.ToggleMappingEnabledByHandle\(\)](#)

## Remarks

From:  
<https://avosupport.de/wiki/> - **AVOSUPPORT**

Permanent link:  
<https://avosupport.de/wiki/macros/function/triggers.togglemappingenable?rev=1516349976>

Last update: **2018/01/19 08:19**

