

Web API request

Masters/SetMaster

Sets the level of the master on the given handle.

API	https://api.avolites.com/12.0/Masters.SetMaster.html	
namespace	Masters	
usage	<code>http://[ip]:4430/titan/script/2/Masters/SetMaster?handle={handle}&value={float}</code>	
example	[http://localhost:4430/titan/script/2/Masters/SetMaster?handle_titanId=1605&value=0.5 (link opens in new tab)
action	sets the grand master to 50%.	
parameter	Handle - the master to be set value Float - the value to be applied to the master	
returns	nothing if succesful error message if failed	
remarks	Using a usernumber will fail as masters don't have one. Either assign the master to a handle and use its location or use the reserved Titan ID, see titanId The possible range of values depends from the master. Values outside the range of possible values are silently ignored by Titan. The value for Intensity masters is 0...1 and corresponds with 0...100% intensity. The value for rate masters may go from 0 to 10 depending from the master's setting. By default, rate masters go from 0% to 200%, and the value range is 0...2. For BPM masters the value directly sets the BPM value. E.g. <code>SetMaster?handle_titanId=1615&value=128</code> sets BPM master 4 to 128 BPM.	

Used In

- [MIDI To Web](#)
- [Web-API requests](#)
- [Masters/SetSpeed](#)

From:
<https://avosupport.de/wiki/> - AVOSUPPORT

Permanent link:
https://avosupport.de/wiki/webapi/requests/masters_setmaster?rev=1730790220

Last update: 2024/11/05 07:03

