


Pulse 1:1 Pattern

Slope	rectangle, duty cycle = 1:1
Range	-1000 ... 1000
used in	Dimmer Pulse 1:1, Frost Pulse 1:1, CTO Pulse 1:1

(created from the shapefile using [Converting Patterns in Excel](#))

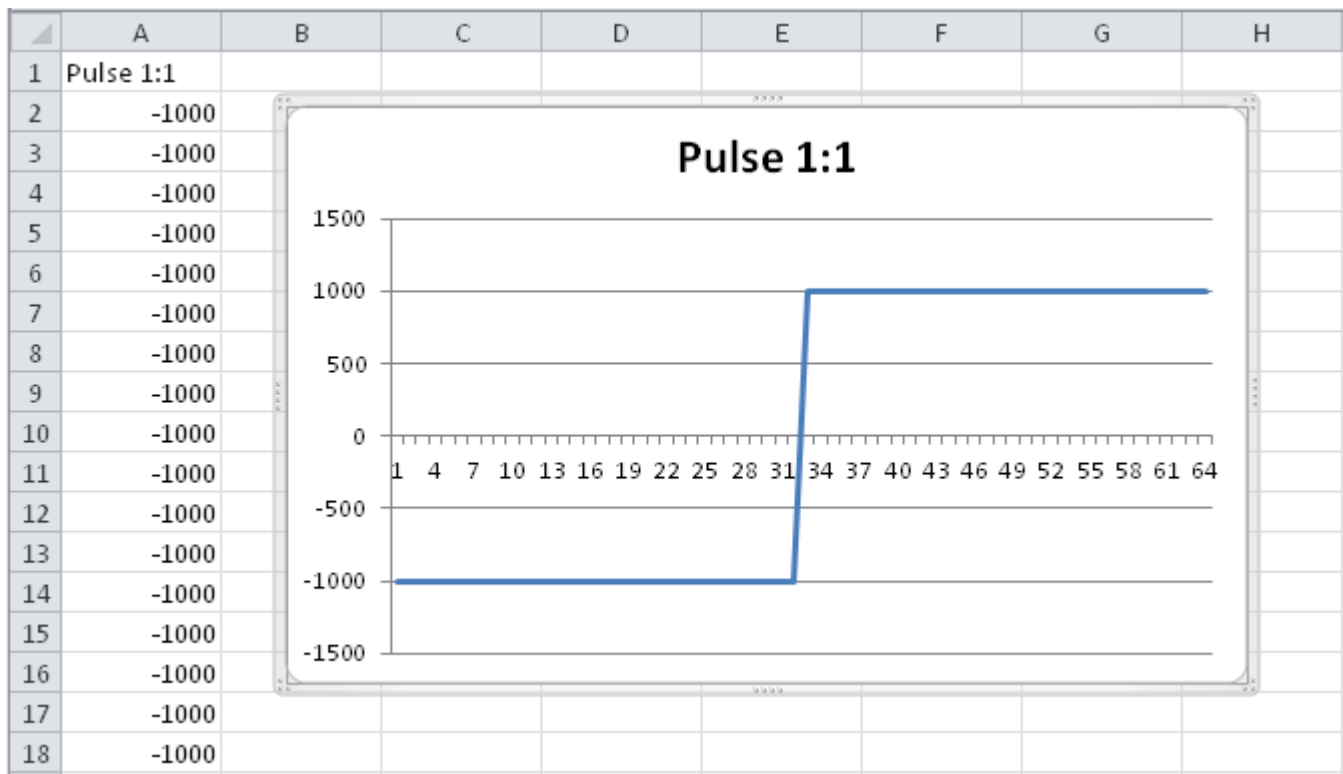

From:
<https://avosupport.de/wiki/> - AVOSUPPORT

Permanent link:
https://avosupport.de/wiki/shapes/pattern/pulse_11?rev=1510692405

Last update: 2017/11/14 20:46

